



Timber Harvest Program

Standard Operating Procedures for
Instream Turbidity Monitoring

October 2006

Table of Contents

Purpose.....	3
Timing: Monitoring Season.....	4
Monitoring Triggers: Rainfall Information.....	4
Locations: Monitoring Sites	4
Equipment: Turbidimeter / Turbidity Probe	4
Calibration and Accuracy Checks.....	5
Field Collection Procedures.....	5
Probe.....	5
Grab samples	6
Stage Measurements	6
Sample Analysis.....	6
Data Sheet	7
Reporting Requirements	8

Purpose

This document provides standard operating procedures for instream turbidity monitoring on forest streams pursuant to the General Conditional Waiver of Waste Discharge Requirements – Timber Harvest Activities in the Central Coast Region (General Waiver). These procedures, when followed correctly, will support the collection of turbidity grab samples or insitu probe measurement data. The data will be used for trend analysis and to determine compliance with Monitoring and Reporting Program R3-2005-0066.

Throughout this document “the discharger” means the landowner and anyone working on behalf of the landowner in the conduct of timber harvest activities including monitoring.

Timing: Monitoring Season

Monitoring shall begin at the onset of timber harvest operations (i.e. tree falling, yarding, and / or roadwork, etc.) and shall be consistent with the Monitoring and Reporting Program (MRP), any conditions set forth within the General Waiver or Waste Discharge Requirements, and the procedures outlined in this document. The turbidity monitoring season begins on or after October 15 as specified in the MRP. You are required to conduct forensic monitoring throughout the entire year as necessary. Monitoring shall continue as specified in the MRP until it is revised or rescinded.

Monitoring Triggers: Rainfall Information

Monitoring events¹ are triggered by rainfall events as prescribed in the MRP and as necessary according to forensic monitoring requirements.

The discharger shall document when and where rainfall data was obtained for each monitoring event on the Timber Harvest Turbidity Monitoring Field Data Sheet (Data Sheet). The Data Sheet may be downloaded from the website at: http://www.waterboards.ca.gov/centralcoast/Facilities/Timber_Harvest/index.htm and then click on “turbidity.” Hard copies of the data sheet are available upon request.

Rain gauges used shall represent precipitation at the harvest site as closely as possible. Compare rain gauge readings at the site to published gauges whenever possible.

Locations: Monitoring Sites

Turbidity sampling shall occur at monitoring locations specified in the MRP or identified during forensic monitoring. Identify the monitoring locations for each harvest at the top of the Data Sheet and include the latitude and longitude of the location in North American Datum of 1983 (NAD83) (i.e. decimal degree format dd.ddddddd). Latitude and longitude are available at the www.topozone.com website.

Equipment: Turbidimeter / Turbidity Probe

The MRP specifies that a handheld turbidimeter is acceptable for the purposes of measuring instream turbidity. A handheld turbidimeter is either field equipment, equipped with a probe that takes direct turbidity readings from the watercourse, or bench top laboratory equipment that takes a turbidity reading from a sample

¹ A monitoring event is defined as all the turbidity samples or readings taken during the same storm event.

already collected from the monitoring location. Some models of the bench top style turbidimeter are designed to be taken into the field.

Whether a bench top turbidimeter or probe is used, the equipment must report turbidity levels in Nephelometric Turbidity Units (NTUs) and be able to read within a scale of at least 0 – 1,000. Each piece of equipment must be assigned a unique equipment identification number.

Calibration and Accuracy Checks

Turbidity equipment (probe or bench top turbidimeter) must be calibrated within twenty-four hours prior to each sampling event using standard reference materials and following the manufacturer's instructions. Calibration must include at least two calibration points that are intended to bracket the expected conditions in the field. Calibration data must be recorded on the data sheet and include the equipment identification number, date and time, result prior to calibration, value of calibration standard, and result following calibration.

An accuracy check must be performed on the turbidity equipment within 24 hours following each sampling event. Accuracy check must include the same calibration points and certified reference materials as were used in the pre sampling calibration. If the readings are not within 5% of the standard value for any of the ranges, the probe or bench top turbidimeter must be recalibrated. Accuracy check data must be recorded on the data sheet and include equipment identification number, date and time, accuracy check result, and value of calibration standard.

Field Collection Procedures

Take turbidity reading with the probe or collect the grab sample away from the stream bank in the main current in a location that best represents the water column. An optimal location would be in a relatively straight reach that is well mixed, with uniform hydraulics, and away from turbulence. Never sample stagnant water.

When wading² to the site try not to disturb bottom sediment. Be careful not to take a turbidity reading or collect water that has sediment from bottom disturbance. Mark the site with flagging, photo-documentation, or other method to ensure that subsequent sampling occurs at the same location.

Probe

The discharger must take a turbidity reading using a probe that has been cleaned according to the manufacturer's specifications or collect the sample using a clean sample container.

² A small clean container, such as a bucket, attached to a long handle may be used to collect a sample from a stream if direct access to the bank is difficult or dangerous.

If using a probe, identify a sampling location and place the probe in the stream at least 2.0 cm below the waters surface but not more than 4.0 cm below the surface. Allow the probe measurement to stabilize (see manufactures instructions) and record the result on the field data sheet.

Grab samples

The sample container must be a plastic, wide mouthed, bottle with a screw top lid. Analyze the samples immediately. If samples will be placed in storage prior to analysis, they must be stored in amber laboratory bottles at 4° C for a time period not to exceed twenty four hours.

All bottles must be cleaned prior to each use according to the following specifications, 1) Wash each sample container with a brush and phosphate-free detergent, 2) Rinse three times with cold tap water.

Prior to sample collection label the bottle with the name of the sampler, location, and the date/time the sample was taken. Identify the sampling location and stand facing upstream. Rinse sample container three times with ambient water before filling with sample. To collect the sample, lower the lip of the bottle **below the surface of the water** and towards the current. Collect the sample with a “scooping” motion to sample the full water column instead of just one spot. (see Attachment 1, Collecting a Turbidity Grab Sample) Promptly³, pour out excess water to leave at least a 1-inch air space so the sample can be re-suspended (by inverting the sample container several times) prior to analysis.

Stage Measurements

At each monitoring location establish a staging location where the substrate is relatively stable. During each sampling event measure stream stage with a yard stick, staff gauge, or staff plate for comparison to future measurements.

Sample Analysis

Perform the sample analysis per the manufacture's recommendation for the turbidimeter. If performing analysis with a bench top turbidimeter, conduct analysis on three separate sub-samples⁴ from the same bottle and record the median⁵ on the Data Sheet. Always re-suspend the sample by gently inverting the sample bottle several times (do not shake as air bubbles can interfere with your readings) before transferring to sub sample vials to prevent a misrepresentative reading due to settling.

³ This must be done immediately after collecting the sample. Waiting to pour out excess water can create an unrepresentative sample as some material may have already settled.

⁴ If using bench top turbidimeter, all vials for subsamples must be cleaned to manufacture's recommendations.

⁵ Constituting the middle value in the distribution.

Data Sheet

All sections of the field data sheet must be completed for each monitoring event.

Identify the Timber Harvest Plan (THP) or Nonindustrial Timber Management Plan (NTMP) number, Plan Name, and monitoring year. For NTMPs identify the unit or notice of timber operations (NTO) number.

Identify the monitoring sites with a unique site identification (ID). This ID needs to correlate to the monitoring maps in the MRP. Provide the latitude and longitude of each site in decimal degree format (e.g. 35.345600N 122.678900W).

Identify the type of turbidimeter or probe.

Provide data from pre sampling calibration prior to each monitoring event, including the equipment identification number, date and time, result prior to calibration, value of calibration standard, and result following calibration. Record the name of the person who conducted the calibration.

Provide data from accuracy checks following each monitoring event, including the equipment identification number, date and time, accuracy check result, and value of the standard. Record the name of the person who conducted the accuracy check.

Provide the date and time each sample was taken and the date and time the sample was analyzed. Record the stage height and note any additional information such as problems at the site or any other observations.

Note the rain gauge location reading and time; amount and duration of rainfall; and current weather.

Estimate whether the stream is on the rising or falling limb of the hydrograph.

Reporting Requirements

By November 15 of each year, the discharger must submit an Annual Report to the Central Coast Water Board per the requirements in the MRP and the following:

- ❖ A summary of the water quality monitoring performed during the previous year. Any monitoring described in the summary must also include the data submitted in an electronic format compatible with Excel.
- ❖ A detailed map⁶ meeting the following specifications:
 - In color (if possible).
 - Title stating: "Water Quality Monitoring Locations for THP No. XXXX"
 - All monitoring locations and routes clearly marked with unique site identification tags.
 - A Key or Legend identifying all monitoring locations and routes.
 - North Arrow.
 - Scale
- ❖ Completed Field Data Sheets with data from all monitoring events.

⁶ The map needs to be submitted only once unless monitoring station locations are modified. In the future a map with unique monitoring site tags shall be submitted with the Timber Harvest Information Form and Fact Sheet.

Literature Consulted

Anderson, Chauncey W. "Chapter A6 Field Measurements Version 2.1 – 6.7 Turbidity" National Field Manual for the Collection of Water-Quality Data United States Geological Survey. September 2005.

Eaton, Andrew D. Clesceri, Lenore S. Greenberg, Arnold E. eds. "2130 Turbidity" Standard Methods for the Examination of Water and Wastewater Washington D.C., 1995 p. 2-8 – 2-11

Ice, Dr. George. Dent, Liz. Walsh, Jenny. Hafele, Rick. Wilkinson, Dave. Brodziak, Lana. Caton, Larry. Hunt, Travis. Hammond, Ellen. Measeles, Paul. et all. "Chapter 11 and Appendix E" Oregon Plan for Salmon and Watersheds Water Quality Monitoring Technical Guidebook Version 2.0 July 1999

medians Copyright © 2006, Lexico Publishing Group, LLC. 19 Sept. 2006
<<http://www.dictionary.com>>


United States Environmental Protection Agency Office of Water. "Chapter 5.5 Water Quality Conditions – Turbidity" Volunteer Stream Monitoring: A Methods Manual EPA 841-B-97-003. November 1997

White, Adona. Water Resource Control Engineer. North Coast Regional Water Quality Control Board. Interview, Review, Edits. 21 Sept. 2006

Document1



Getting into position to take a turbidity grab sample.

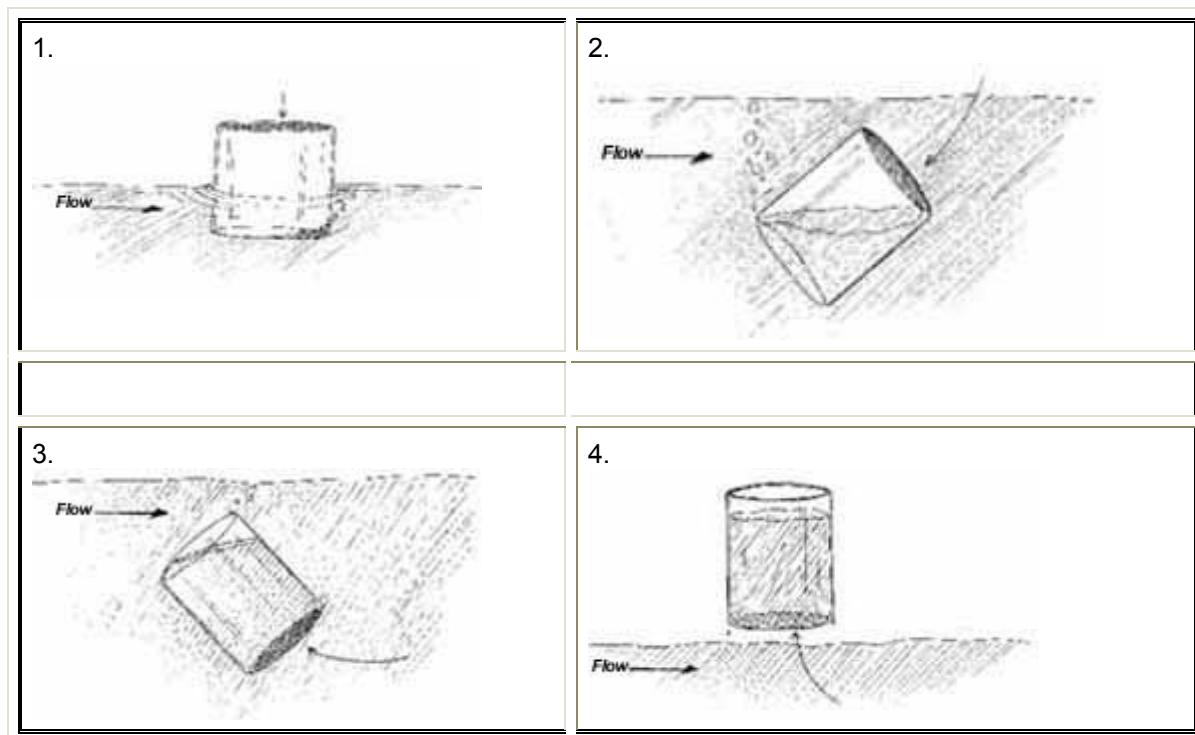

Taking a water sample.

Turn the bottle into the current and scoop in an upstream direction.

Sketches taken from USEPA "Quality Assurance, Quality Control, and Quality Assessment Measures. Figures 5.2 and 5.3" Volunteer Stream Monitoring: A Methods Manual <http://www.epa.gov/volunteer/stream/vms50.html>